


## Clearing Stored DTC's on Diagnostic Gauge (PowerView)

**NOTE:** For more detailed information on the diagnostic gauge, see the PowerView Installation and Operation Manual or your **John Deere Engine Operation and Maintenance Manual**. **Operation manual does not explain clearing DTC's.**

The engine does not need to be running to navigate the diagnostic gauge screens. For description of trouble codes, see chart in Troubleshooting Section of appropriate engine technical manual (CTM).

### LEGEND:

- A - Clear Fault Codes
- B - Restore All Defaults
- C - Menu (Select) Key
- D - Scroll Up Arrow Key
- E - Scroll Down Arrow Key
- F - Enter Key

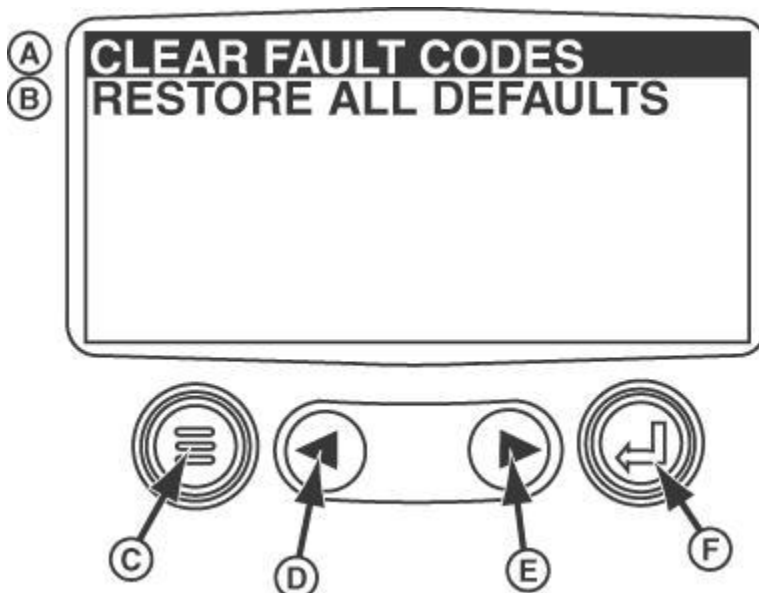

1. Turn power to diagnostic gauge **OFF**.
2. Turn power **ON** to diagnostic gauge. **As soon as screen backlight comes on, simultaneously press and hold Menu (C) and Enter (F) keys.** A menu appears (See figure 1.) on the screen with the following options: "Clear Fault Codes" (A); and, "Restore All Defaults" (B), with "Clear Fault Codes" item highlighted.

**NOTE:** Because there is only a split-second moment when this step can successfully be performed, it might have to be done more than once before success is achieved.

3. With "Clear Fault Codes" item highlighted, press enter (F) key.
4. Screen displays that stored fault codes have been cleared. →
5. Prior to restarting the engine or other such operation, turn power to the diagnostic gauge **OFF**, then turn it back **ON** again.

